

## Mounting Instruction

Revision set : **Cable connector 3-pole**

Article No. : R61.474


### Contents of the revision set:

- Cable connector 3-pole
- Instruction



**NOTE:** - Before servicing the Spirovent Superior make sure the unit is isolated from the power supply and that all pressure is released.  
(see chapter 7.3 of the user manual).

- Installation and maintenance may only be carried out by a qualified installer

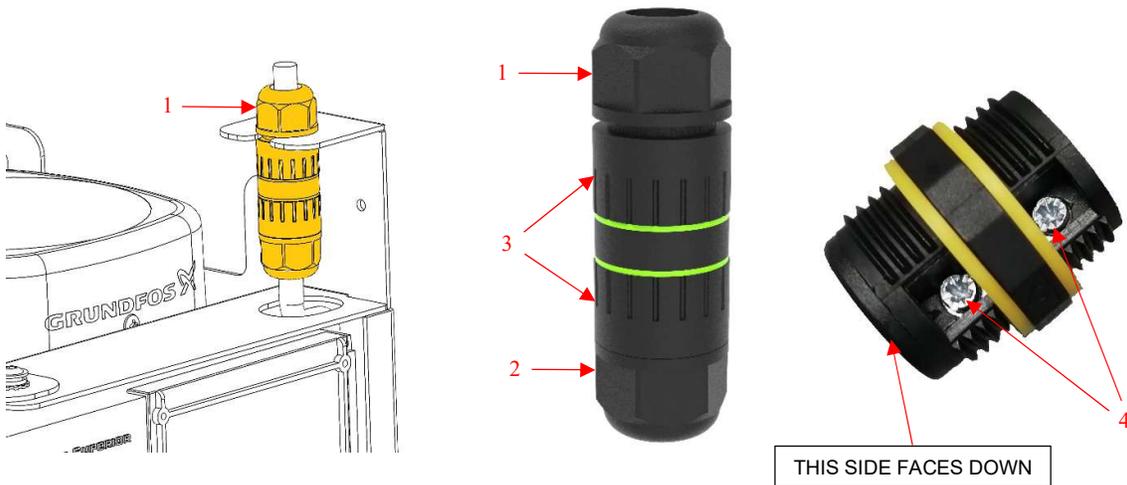


### (De)mounting:


- 1) Separate cable connector assembly from frame by loosening upper cable gland (1).
- 2) Loosen lower cable gland of cable connector (2).
- 3) Loosen connector caps (3) and slide away along harness to access wire terminals, these could be gripped tightly around harness so be cautious not to twist wires whilst removing.
- 4) Loosen screws (4) to removes wires.

(Re)mounting:

- 1) Ensure all wires are not damaged and that enough stripped wire is available to make a secure connection, see figure 1.
- 2) Insert wires into respective terminals of new wire connector, tighten screws securely (4). Note connector orientation and symbols for respective wires, see figure 2.
- 3) Ensure all wire connections are secure.
- 4) Fasten upper and lower connector caps to terminal body (3).
- 5) Fasten lower cable gland (2) securely to connector assembly.
- 6) Secure connector assembly to frame and tighten upper cable gland (1) .

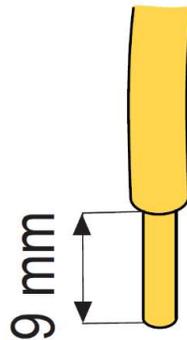

**FIGURE 1, REQUIRED CONNECTION AREA**

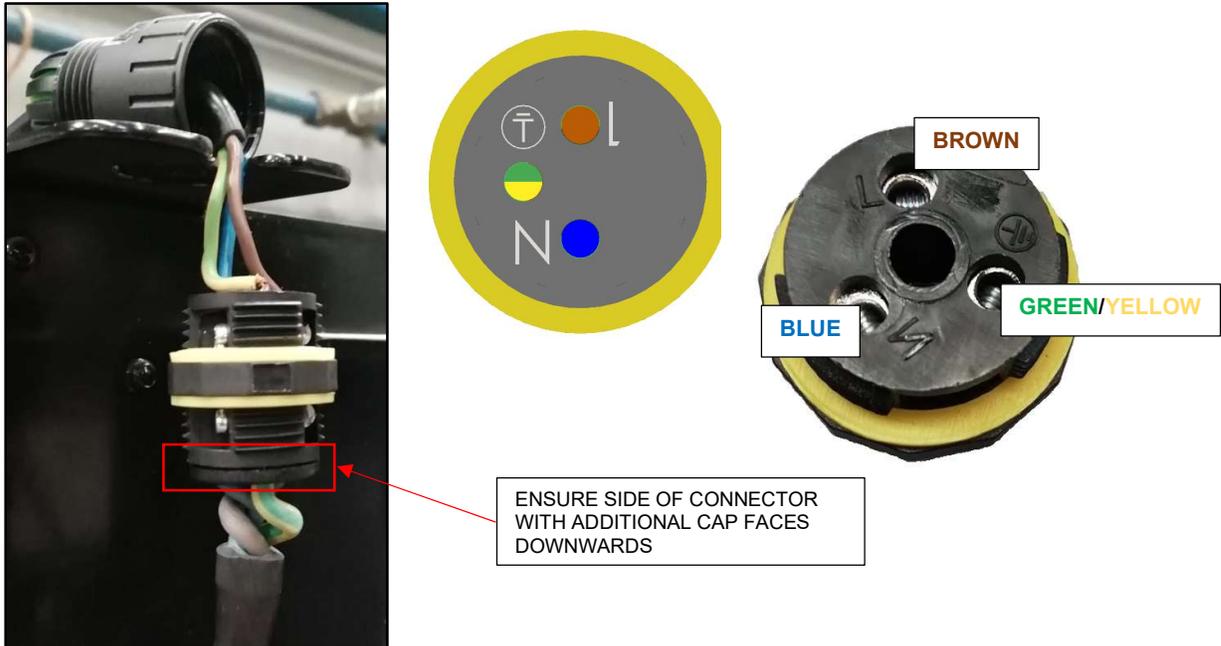

**FIGURE 2, TERMINAL CONNECTIONS**

75.489\_00

Putting the Spirovent Superior back into operation

See chapter 5. of user manual to put system back into service.